


How to access the SD card slot on Main Control Board

The SD card slot is located on the Main Control Board inside the panel enclosure.
A VIEW OF THE ELECTRONIC MODULE

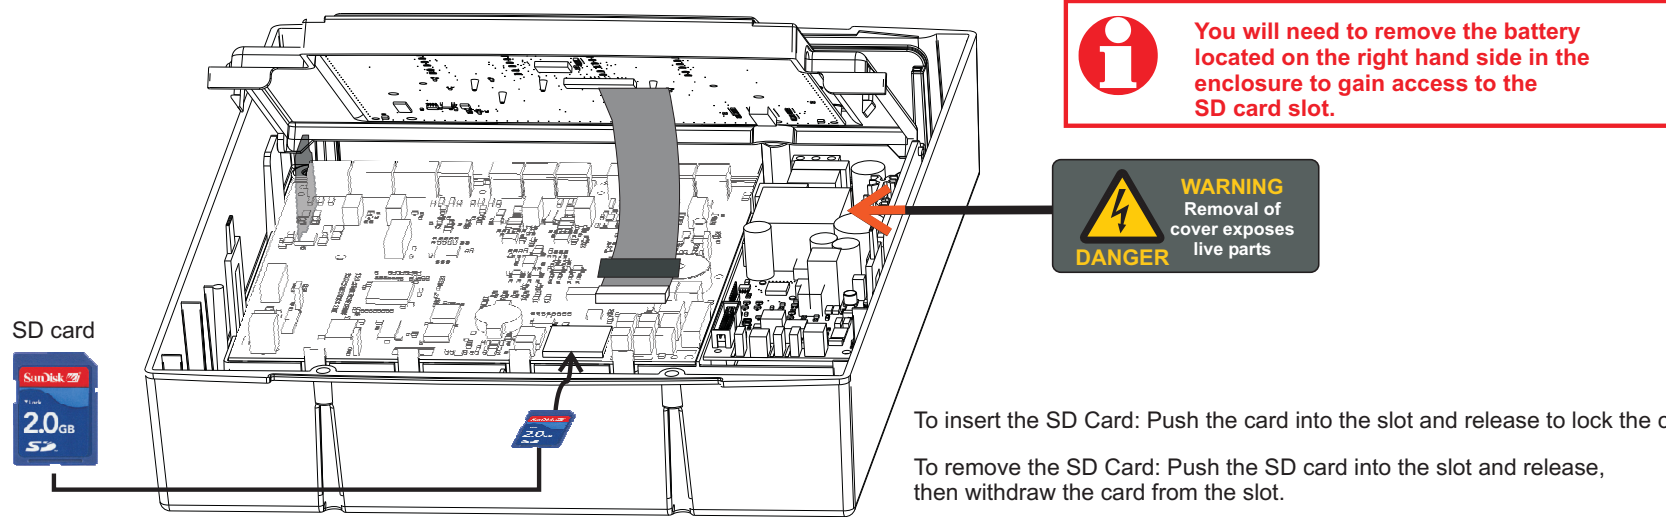

To insert the SD Card: Push the card into the slot and release to lock the card.

To remove the SD Card: Push the SD card into the slot and release, then withdraw the card from the slot.

How to upgrade the panel firmware from a SD card

The panel firmware can be upgraded from a SD card, assuming the SD card holds the firmware you want to load onto the panel. You will need to be at access level 4 to perform the upgrade.

