

Automatic Fire Detection



FIRE ALARM



Panel buzzer sounds



Fire



Red



Display

Shows: location time and date of fire.

To scroll fire events

Press



Previous

FIRE



Next

To cancel panel buzzer

Press



CANCEL BUZZER

Delay alarms to verify fire (if set up)

Press



VERIFY



Verify Delay



FIRE ALARM

To silence alarms and reset system

Press



SILENCE ALARMS

Press



RESET

Manual control of fire alarms

To sound alarms

Press



SOUND ALARMS



FIRE ALARM



Panel buzzer sounds

To silence alarms

Press



SILENCE ALARMS

Other Controls

To access other controls

Press



MENU ON/OFF

See the operating instructions on how to operate menu controls

Site specific controls

To Operate: Press **Shift** and then the required 'U' key:

U1

U2

U3

U4

Fault Indication



Panel buzzer sounds



Fault



Amber



Display

Gives information on location, time and date of fault.

To cancel panel buzzer

Press



CANCEL BUZZER

Refer to your servicing organisation for fault rectification.

Disablement Indication



Disablement



Amber

Display

Gives information on location time and date of disablement.



Zone Fire indicators are not applicable for Network Nodes. For details see the operating instructions. All events must be recorded in the log book. # The 'Active' LED is only lit if Fire Routing O/P is used.