



**TO TEST & RESET**

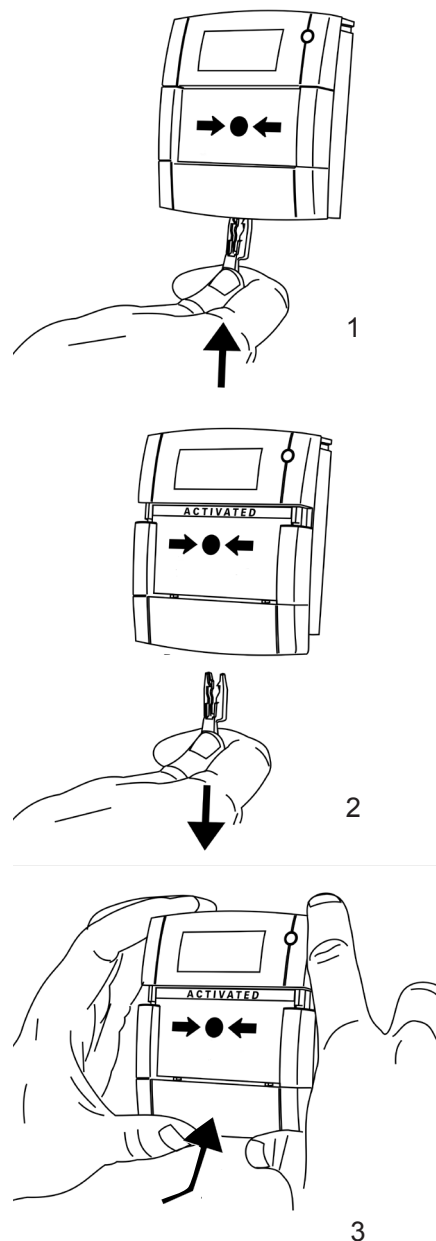



**TO REPLACE GLASS / INTERCHANGE BETWEEN RESETTABLE AND GLASS ELEMENT**

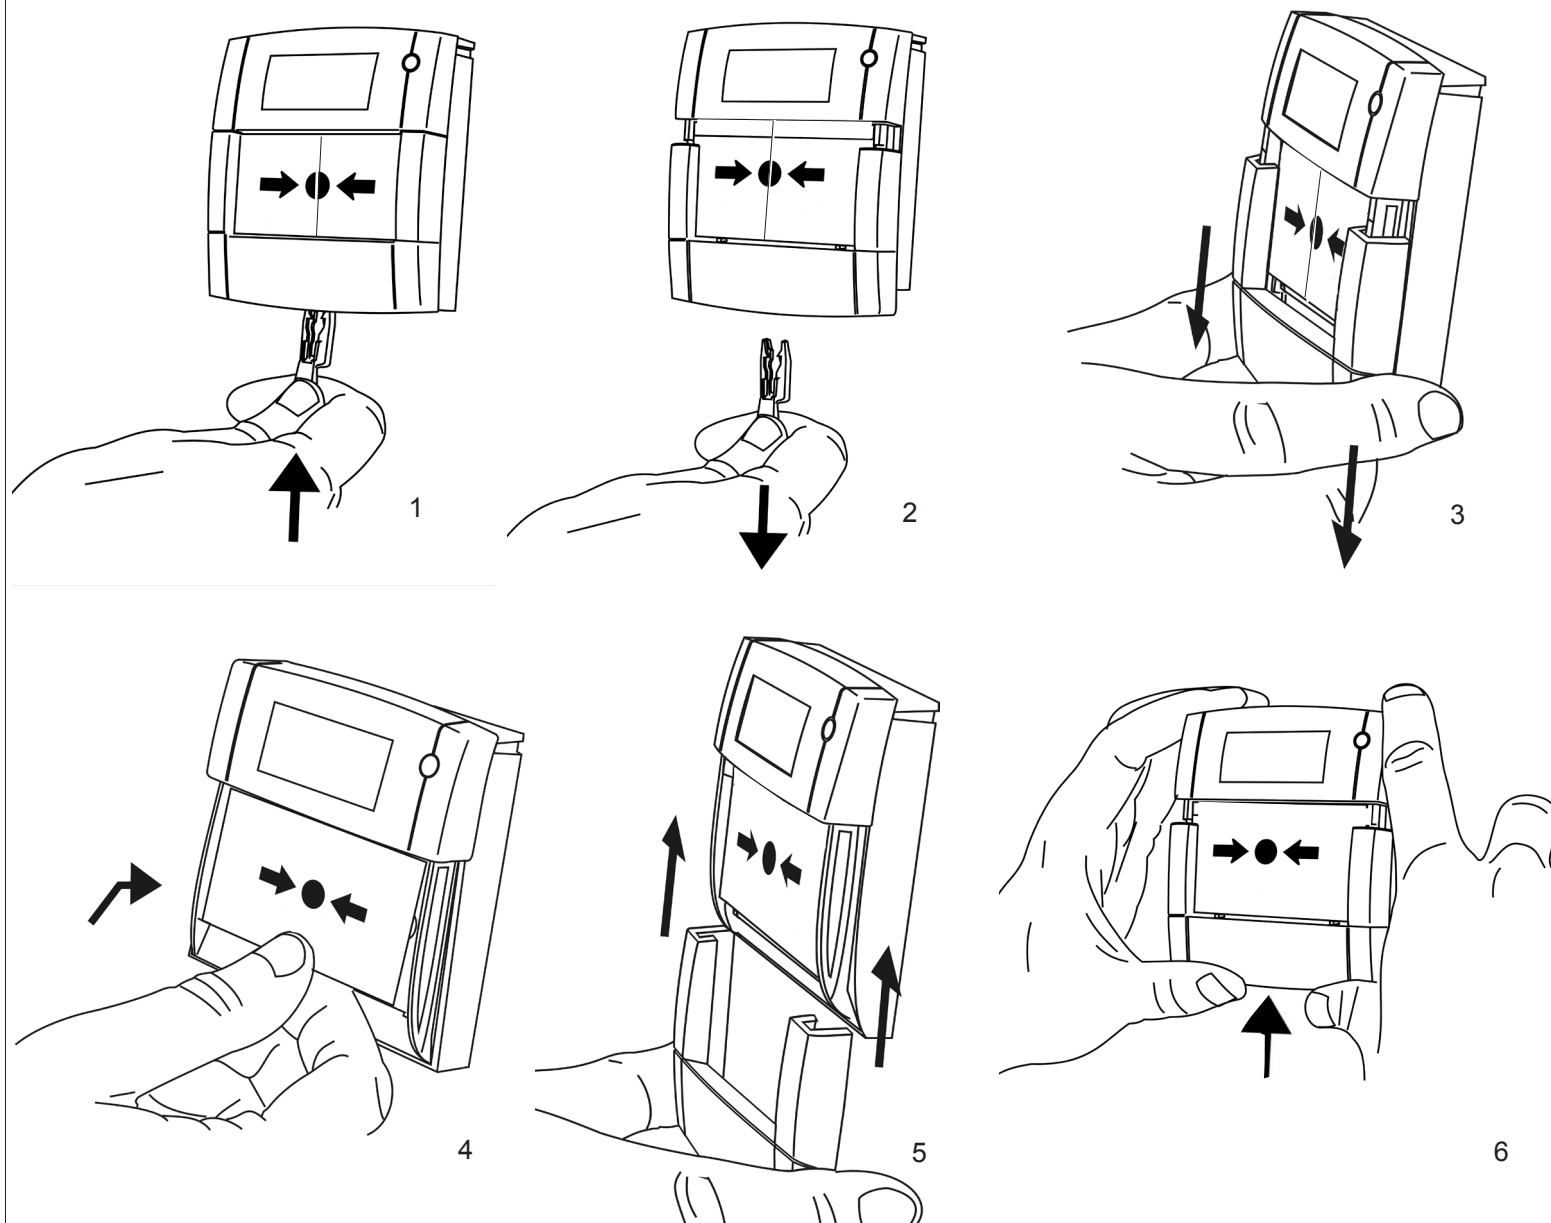

# GEN T INSTALLATION INSTRUCTIONS FOR THE MANUAL CALL POINT MODELS XENS-800, XENS-801, XENS-805, XENS-842, XENS-850 by Honeywell


| CONNECTION DETAILS | XENS-800, XENS-805<br>XENS-842, XENS-850 | XENS-*** | XENS-*** | XENS-*** |
|--------------------|------------------------------------------|----------|----------|----------|
| <p>OR</p>          |                                          |          |          |          |
|                    |                                          |          |          |          |

## DIMENSIONS

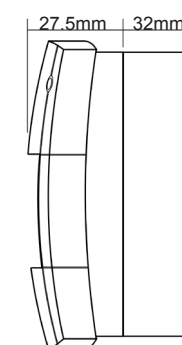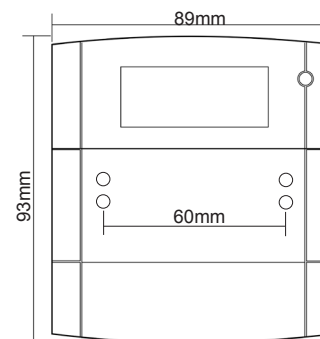

## PUSH FIT CONNECTOR

After wiring the terminal connector, plug into the appropriate position, see connection details (left).

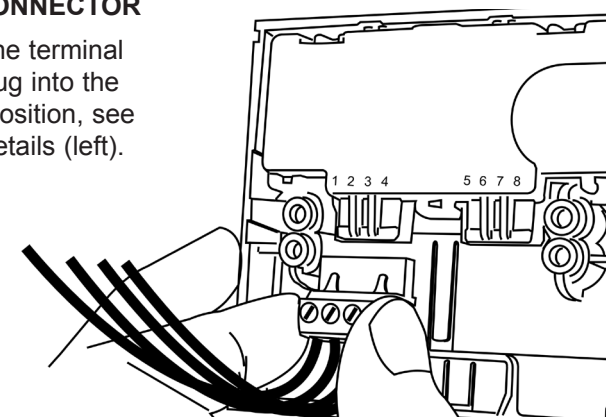

| CONNECTION DETAILS | XENS-801 |
|--------------------|----------|
|                    |          |
| <p>OR</p>          |          |

| CONNECTION DETAILS | XENS-*** |
|--------------------|----------|
|                    |          |
| <p>OR</p>          |          |

## TECHNICAL DATA



30VDC Max



2A Max



IP24D



110/160g



-10°C to 55°C



Red, Ral 3001  
Yellow, Ral 1006  
Green, Ral 6016  
White, Ral 9010  
Blue, Ral 5002



**Important Notes; -**  
**Please do not over tighten fixing screws.**  
**The use of lubricants, cleaning solvents or petroleum based products should be avoided.**