



Operating instructions for Vigilon Plus range of panels and nodes based Fire detection and alarm system



Contents

Preface	3	How to view active events	23
Associated Documents	3	How to set the system clock	24
Conventions	3	How to use the integral printer	25
Symbol Keys	3	To Switch On / Off the Printer	25
Abbreviations	3	To action a Paper Feed	25
User responsibility	4	To conduct a Printer Test	25
Daily	4	How to enable/disable Sensing	25
Weekly	4	How to enable/disable a zone	26
Limitation of false alarm	5	How to manually switch On / Off FARE	26
SAFE STATE Declaration	5	How to manually Disable / Enable FARE	27
Control and indicating equipment	5	How to manually Disable / Enable FPE	27
Control panel	5	How to enable/disable an IO line	28
Vigilon Plus Network Node	6	How to enable/disable auxiliary relay	28
Vigilon Plus Repeat panel	6	Other enable/disable options	29
Zonal Mimic panels	6	How to view a device label	29
Description of controls and indications	7	How to view a zone label	30
Normal condition	11	How to view a I/O line label	30
How to operate a 'U' button	11	How to view the local panel label	31
Weekly tests	12	To view or print a map	31
How to manually raise an alarm of FIRE	13	Editing labels	32
Automatic detection of FIRE	14	How to edit a device label	32
Fault conditions	16	How to edit an Input/output line label	33
Typical fault messages	17	How to edit a zone label	34
Disablement conditions	18	How to edit a local panel label	34
Typical Disablement Messages	19	How to edit custom label	35
Menu controls	20	Maintenance	36
To carry out a display test	21	Replacing the glass on a Manual Call Point	36
How to change your PIN code	21	Resetting the resetable element on a Manual Call Point	36
How to view the historic events	22	Battery replacement	37
Cards inside the control panel	22	Replacing printer paper	37
How to save changes to memory	23	Repair function	38
		SAFE System Switch Operation	39

Preface

This is the fourth issue of the operating instructions for the Vigilon Plus panel and Vigilon Compact Plus panel based fire detection and alarm system. It covers instructions for Delayed Alarm Dependency, SAFE System Switch operation and update to Notified body.

Associated Documents

Vigilon Plus panel, Vigilon Compact Plus panel and Vigilon Plus network Node:

- Installation instruction manuals
- Log Book

Conventions



This is a note to highlight important text that is normally hidden in the main text.



This is either a caution to prevent damage to the equipment or a warning to inform of dangerous conditions that may result in injury or death.

Symbol Keys



What you will see.



What you will hear.



A fire condition.



On

LED illuminated - On.



Flashing

LED illuminated - Flashing.



Not applicable



The WEEE symbol. It indicates the product is to be recycled and not thrown away.



The CE compliance logo. This product is in conformity with the relevant European Union harmonisation legislation.



The UKCA (UK Conformity Assessed) marking is a new UK product marking that is used for goods being placed on the market in Great Britain (England, Wales and Scotland).

Abbreviations

CIE	Control and Indicating Equipment
CPU	Central Processing Unit
FARE	Fire Alarm Routing Equipment
FPE	Fire Protection Equipment
LED	Light emitting diode (light)
MCP	Manual call point
NVM	Non Volatile Memory
OC or O/C	Open circuit
IO or I/O	Input / Output
SC or S/C	Short circuit

[Text] Denotes menu option that appears on display

Text Denotes physical keys on keypad

User responsibility

Your fire alarm system should have been designed, installed and commissioned to your site specific requirements and in accordance with the requirements of BS5839 Part 1. You should have received instructions about your system during the handover stage and must make arrangements to ensure the system is regularly tested and maintained.

It is recommended that the person responsible for the fire alarm system should ensure the system is tested and maintained in accordance with the requirements of BS 5839 : Part 1 and become familiar with:

- the operation of controls and be able to interpret the indications given at the control panel
- keep up to date all documentation associated with the system.



Any servicing work on the Vigilon system must be carried out by a suitably trained person, please refer to your servicing organisation.

Daily

BS 5839 : Part 1, states that the system should be inspected daily to ensure:

- That a normal indication is given at the control and indicating equipment.
- That any previously indicated fault conditions have received appropriate attention.
- All system events are entered into the Log Book for future reference.
- That the use of the 'area(s) that are inspected' has not changed since the system was designed.
- That no unsafe practices that could lead to fire are being undertaken.

Weekly

When testing the system there may be a need to isolate ancillary outputs and it is important to contact the alarm receiving centre before and after the weekly test.

- A different manual call point of the system should be tested to ensure the system is capable of operating under alarm conditions.
- The operation of the alarm sounders should be checked, which also reminds the occupants that there is a fire alarm system which gives a particular sound and visual output.



The test should be performed at a regular time to avoid confusion between a test and a genuine fire alarm. The alarm receiving centre must be contacted before and after the test to check alarms are received and also to avoid unwanted alarms.

Quarterly

At quarterly intervals the system should be inspected and any work necessary should be performed by a trained maintenance engineer.



For help with service and maintenance please refer to your servicing organisation, see contact details entered in the log book.

Limitation of false alarm

It is recommended that the person responsible for the fire alarm system should arrange for suitable investigation and appropriate action on occasion of every false alarm. For a system having less than 40 automatic fire detectors installed, an in-depth investigation should be instigated on occurrence of two false alarms in any rolling 12 months. For a system having more than 40 automatic fire detectors an investigation should be instigated if there has been:

- one false alarm for every 20 installed detectors in the system in any rolling 12 months, or
- two or more false alarm occurrences from a single device.

SAFE STATE Declaration

(Annex I 13.4.5 of EN 54-2:1997 +A1:2006)

If the main operating system processor software fails, the watchdog devices ensure the Control and Indicating Equipment (CIE) enters a “Safe State”, the internal buzzer is activated. The System Fault and General Fault indicators are illuminated informing the user that the system has malfunctioned.

If an auxiliary card (Input/Output, Loop, Network) fails, then the main Central Processing Unit (CPU) will attempt to restart it and put it into its quiescent state. System Fault and General Fault Indicators will still be illuminated until cleared by the user.

Control and indicating equipment

On occurrence of a fire, fault or disablement event in the protect premises, the event is quickly indicated at a control and indicating equipment. The control and indicating equipments are installed in accessible location and can be operated by the person responsible for the fire system.

Control panel

The control panel is the heart of the system. It is normally located near to the main entry or exit point of the protected premises.

The control panel continuously monitor devices that are connected to each device loop. The device loop cable is routed through the protected premises to cover all areas with both ends of the loop terminating at the control panel. On the loop cable are installed devices such as fire sensors, that constantly monitor the environment for fire. Alarm devices on the loop provide alert and evacuation alarm to warn occupants in the protected premises in the event of a fire.



Zone indicators

Control panel with zone indicators
Network node (zone indicators are not used)

Vigilon Plus Network Node

A Vigilon Plus Network node and Vigilon Compact Plus Network Node gives central indications of events in a Vigilon network.

NA Some operations identified by the symbol 'NA' covered in this manual are not applicable for the *Vigilon Plus Network Node (including Vigilon Compact Plus Node)*.

Vigilon Plus Repeat panel

There may be one or more repeat panels installed in the protected premises to provide secondary indications of the system condition. The larger repeat panel additionally provide system controls. The repeat panels are usually located near to secondary entry and exit points of the protected premises.



Vigilon Plus Repeat panel
(provides system indications and controls)



Repeat indicator panel
(provides system indications)

Zonal Mimic panels

There may also be a number of mimic and zonal mimic panels installed in the protected premises, to provide visual indications in a graphical and zonal format.

Normally one is installed next to the main control panel. There may be additional Zonal mimic panels installed in other areas of the protected premises to cover sub division of the premises.



A3 Zonal panel
(Provides zonal indication of events)



A3 Mimic panel
(Provides location indication of area(s) on a plan where event(s) have occurred)

Description of controls and indications

Open the front door to reveal the controls.















Vigilon Plus 4-6 loop panel
 Vigilon Compact Plus panel
 Vigilon Plus Network Node




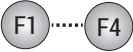






Zone indicators are NOT applicable on a Vigilon Plus Network Node







Description of controls and indications

Indicators	Description
<i>Display</i>	<i>The Display provides messages of the system status / events by means of 8 lines by 40 characters per line display.</i>
Zones  (red)	Secret-until-lit fire zone indicators. When the "Zones" text and number(s) are illuminated it indicates that a FIRE has been detected in the indicated zone(s). NA The Zone indicators are not applicable for a Network node.
Power  (green)	When illuminated it indicates that a supply to the panel is present.
Fire  (red)	When illuminated it indicates that a FIRE has been detected in the protected premises.
Verify  (amber)	When illuminated it indicates that the Verify button has been pressed and the alarm sounders in the system are delayed from sounding.
Fault  (amber)	When illuminated it indicates that a FAULT has been detected in the fire detection and alarm system.
System Fault  (amber)	When illuminated it indicates that a fault has occurred with the system processor. It is important to investigate this fault because the fire system may not be able to detect fires.
Disablement  (amber)	When illuminated it indicates that a part of the system has been disabled.
Active  (red)	When illuminated it indicates the Output to the Fire Alarm Routing Equipment is active.
Fault/Dis  (amber)	When illuminated steady (always with the DISABLEMENT light) it indicates the Output to Fire Alarm Routing Equipment is disabled.
Fault/Dis  (amber)	When illuminated flashing (always with the FAULT light) it indicates that there is a fault at the Fire Alarm Routing Equipment.
Power Fault  (amber)	When illuminated it indicates the battery or mains supply to the panel has failed.
Sounder  (amber)	When illuminated (always with either the FAULT light or the DISABLEMENT light) it indicates that there is a sounder fault (flashing indication) or sounder disablement (steady indication).

Indicators	Description
Sounder  (amber)	When illuminated it indicates that one or more delay blocks are setup on the panel.
Test  (amber)	When illuminated it indicates one or more zones are in Test mode.
Controls	Description
 MENU ON/OFF	Pressing the Menu On/Off will enable/disable the on screen menu facility, which gives access to the system menus.
	The ' Fn ' buttons are used to select a function and sub functions at the panel menus that appear on the display. Each option in the menus corresponds to one of the function buttons and pressing a button will select the option which appears above it on the display.
 CANCEL BUZZER	The Cancel Buzzer button when pressed will stop the internal panel buzzer from sounding.
 SOUND ALARMS	Pressing the Sound Alarms button will sound all the system alarms. This button is only pressed in an emergency or at other agreed times, for example when conducting a sounder test or practice evacuation.
 SILENCE ALARMS	Pressing the Silence Alarms button will silence the system alarms.
 RESET	Pressing the Reset button will clear any fires and return the panel to its normal condition. If a fire condition occurs immediately after reset then the indicated device should be investigated.


Description of controls and indications

Controls	
	<p>If the Verify facility has been set up, then pressing the Verify button in the event of a fire condition increases the time delay before the sounders are activated. This gives the user time to investigate the cause of the alarm and the option of cancelling the alarm within the delay time period.</p>
	<p>These buttons can be configured during commissioning to action user-defined tasks, such as the disablement of devices in areas where smoke may be generated due to maintenance work or where plant shutdown is required.</p>
	<p>The two 'fire events' scroll buttons on the keyboard operate in exactly the same way as the two first level access fire scroll buttons on the front door. These buttons are active when the door is open.</p> <p>Normally the Up, Down, left and right button may be used to scroll text.</p>
<p>Qwerty keypad</p>	<p>Allows the entry of alphanumeric data at the panel, such as a label given to a zone or device.</p>
	<p>This button is pressed to acknowledge an entry of data such as a label.</p>

Normal condition

When a system is operating normally with no fault or disablement present then the panel's display shows a:

- 'Panel healthy' message and
'Network Healthy' message at a Vigilon Plus network node and
- only the 'Power' *green* indicator is lit.

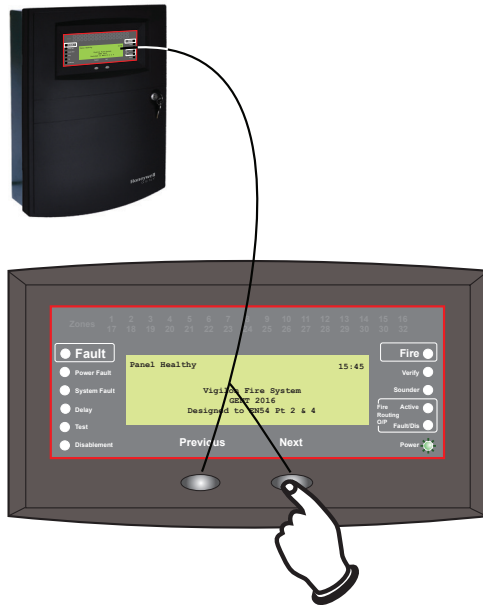

The FIRE events when displayed can be scrolled through by utilising the first level controls located on the panel front door.

How to operate a 'U' button

The U1 to U4 buttons may have been configured during commissioning to action user-defined tasks, such as the disablement of devices in areas where smoke may be generated due to temporary maintenance work or to action a plant shutdown if required.

The function of each 'U' button should be written on the label that is fitted on the back of the panel's door.

- With the panel door open:

To activate a
'U' button task.

You can activate the
predefined task by
operating a 'U' button.

Press:  then..

Press: 

n - can be 1 to 4.

Weekly tests


Every week during normal working hours the fire detection and alarm system should be tested. It is important to inform the alarm receiving centre of the fire test.

The weekly fire test can be carried out at a manual call point without breaking the call point glass.

- Insert the test key into the keyhole located on the bottom-centre front face of the call point and turn the key one quarter of a turn clockwise.



The 'Zone indicators' are not applicable at a Vigilon Plus Network Node

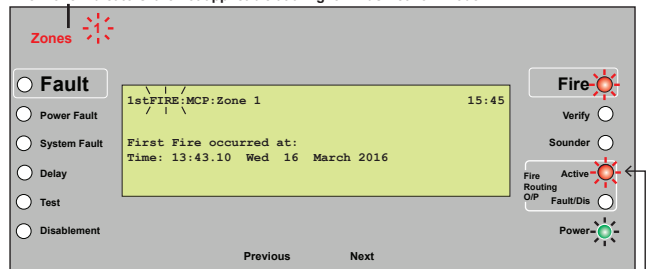

If applicable it indicates there is active Fire routing output to Alarm Receiving Centre. Who would know this is a test as they would have been advised before the weekly test.

At this point the test key is retained in the call point.

- Check the alarms are sounding in the building and an indication is given of the fire event.

- Turn the test key anticlockwise one quarter of a turn and remove it from the call point.
- With the panel door open:

To cancel buzzer

You can stop the panel buzzer from sounding.



Press: Display reads: 'Buzzer cancelled'

To silence alarms

When the test is complete, the alarm sounders can be silenced.



Press: Display reads: 'Alarms silenced'

To reset system

To return the system to normal condition clear any residual smoke or heat from sensors and reset element of any operated manual call points.



Press: Display reads: 'System being Reset - please wait....'

If the operated Manual Call point's element is not reset for normal operation then the display will read:

1st ACTV: MCP: Zone 1 (ACTV meaning Active)
'Call Point not reset properly, Please investigate and try again'

The Fire indications and this message will remain on until Call point is reset for normal operation and subsequent press on the **Reset** button.

Record the event

Make an entry in the log book of the event for future reference.

How to manually raise an alarm of FIRE




If you see a fire in the protected premises and want to raise a fire alarm to warn occupants in the building, you can do this manually by:

- Going to the nearest manual call point that is located away from the fire hazard.
- Press hard with a thumb onto the centre of the glass until it breaks.



The 'Zone indicators' are not applicable at a Vigilon Plus Network Node

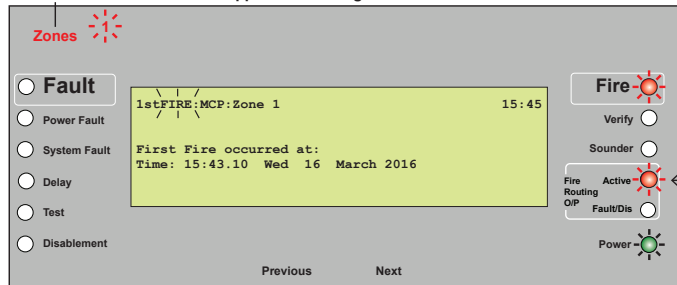

If configured this light indicates there is an active Fire routing output to Alarm Receiving Centre to initiate Fire fighting action.

- With the panel door open:

To cancel buzzer

You can stop the panel buzzer from sounding.



Display reads: 'Buzzer cancelled'

To silence alarms

When the emergency is over the alarm sounders can be silenced.



Display reads: 'Alarms silenced'

To reset system

To return the system to normal condition clear any residual smoke or heat from sensors and reset element of any operated manual call points.

Ensure the fire system is checked by your servicing organisation if there has been fire damage in the protected area.



Display reads 'System being Reset - please wait...'

If the operated Manual Call point's element is not reset for normal operation then the display will read:
1st ACTV: MCP: Zone 1 (ACTV meaning Active)
'Call Point not reset properly, Please investigate and try again'

The Fire indications and this message will remain on until Call point is reset for normal operation and subsequent press on the **Reset** button.

Record the event

Make an entry in the log book of the event for future reference.

Automatic detection of FIRE




A fire in your protected premises is automatically sensed at any one of the fire detection devices installed in the building, such as a sensor or a fire input from an interface. The control panel actions the alarm sounders in the system and at the same time gives the details of the fire event. The event

indication is repeated at all repeat indicator panels in the system.



The 'Zone indicators' are not applicable at a Vigilon Plus Network Node

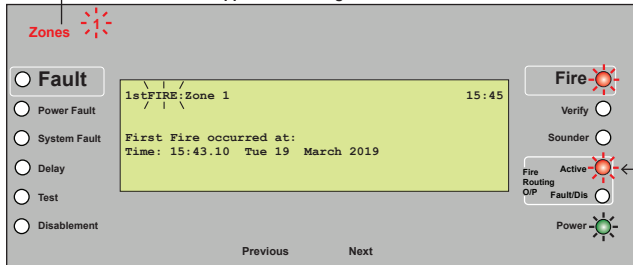

If configured this light indicate there is an active Fire routing output to Alarm Receiving Centre to initiate Fire fighting action.

With the panel door open:

To cancel buzzer

You can stop the panel buzzer from sounding.



Display reads: 'Buzzer cancelled'

To silence alarms

When the emergency is over the alarm sounders can be silenced.



Display reads: 'Alarms silenced'

To reset system

To return the system to normal condition clear any residual smoke or heat from sensors and reset the element of any operated manual call points. **Ensure the fire system is checked by your servicing organisation if there has been fire damage in the protected area.**



Display reads 'System being Reset - please wait...'

If an operated sensing element is not reset for normal operation then the display will read:

1st : Zone 1

'Sensor not reset properly, Please investigate and try again'

If an operated call point is not reset for normal operation then the display will read:

1st ACTV: MCP: Zone 1 (ACTV meaning Active)

'Call Point not reset properly, Please investigate and try again'

The Fire indications and these messages will remain on until operated sensor and call point are cleared for normal operation and subsequent press on the **Reset** button is performed.


Record the event

Make an entry in the log book of the event for future reference.

Multiple fires



Use the [Previous] or [Next] buttons or with the outer door open you can scroll the fire events. The 1st Fire will always appear at top of display. All subsequent fires appear beneath the 1st Fire.

Zones  The zonal indicators show zones in fire condition. If the panel is configured, the first zone to go into a fire condition may be indicated by a flashing zone number, all other zones in fire give a steady indication.



The zone indicators are not applicable for Vigilon Plus Network Node.

Each fire is logged in the Historic Events log, which can be recalled using the menus. See How to view the Historic Events.

To verify an alarm (If required by site procedures)

Upon receipt of a fire condition the alarm sounders in the system can be delayed from sounding by using the Verify button. This allows time to investigate the cause of the alarm. Note the delayed sounders will operate after the verify period has timed-out.



Press:

VERIFY



Delayed Alarm (Dependency)



If the panel has been configured to delay the operation of sounders and outputs, the detection of a fire may indicate a zone fire condition but without the FIRE LED being lit. This indicates that a fire condition has been detected, but the panel is waiting for another device to enter the fire condition before a fire is fully recognised.



If the second device does not enter a fire condition and the first device has cleared for normal operation then after a period of time the panel returns to normal condition.


The condition of having more than one fire indication before activating alarms is known as dependency.

Fault conditions

A fault in the system, such as failure of mains power to the panel or removal of any monitoring device will cause a Fault condition to appear at the control panel. The control panel will provide details of the event, this event indication is repeated at all repeat panels and may also be displayed at zonal and mimic panels in the system.



Panel
buzzer

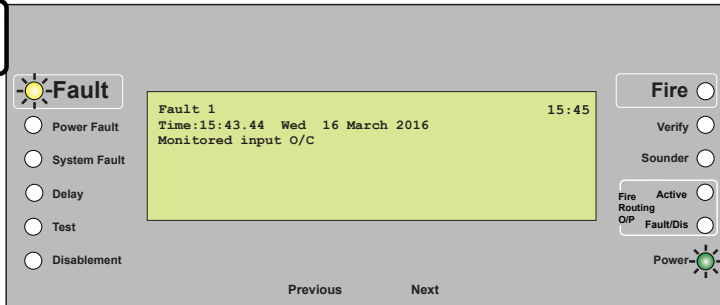

With the panel door open:

To cancel
buzzer

You can stop the panel buzzer from
sounding.

Press:



CANCEL
BUZZER

Display reads: 'Buzzer cancelled'

What
must be
done?

You need to ensure the panel is
returned to normal condition. All
fault repairs must be undertaken by
engineers responsible for the system.
Refer to the contact details in the log
book.

Record
the event

Make an entry in the log book of the
event for future reference.

Multiple
faults

The number 'n' following the word
'Fault' located top left on the display
denotes the number of faults present in
the system.
Each fault is logged in the Historic
Events log, which can be recalled
using the menus. See How to view the
Historic Events.




















Only the trained engineer who is responsible for the fire alarm system must attempt any fault rectification work. For advice please call your servicing organisation, see contact details in the Log book.

Typical fault messages


The table below shows some of the more typical fault messages and indications that may appear at the panel if there are faults in the system. It also gives the meaning and possible rectification action for each fault.

 On  Flashing

Message	Indication	Meaning	Action
FARE Faulty	Fault  Fault/Dis 	The Fire Alarm Routing Equipment FARE is faulty.	Check short circuit or signal transmission failure at FARE
Mains failed	Fault  Power Fault 	The mains supply to the control panel has failed.	Restore the mains supply to the control panel.
Battery discharged n	Fault  Power Fault 	The battery supply to the Control Panel is fully discharged.	Check the battery and replace if necessary.
Battery disconnected	Fault  Power Fault 	The battery supply to the Control Panel has been disconnected.	Reconnect the battery.
Monitored line input OC or SC	Fault 	The monitored line input has an open or short circuit fault.	Check the wiring and ensure the end-of-line device is connected in the circuit.
Master Alarm(s) OC or SC n	Fault  Sounder 	There is an open or short circuit fault on the master alarm wiring.	Check the wiring. Ensure the end-of-line device is connected in the circuit.
Lost Device	Fault  Sounder 	The Device is not communicating with the Control Panel via the Loop. Additional indication given if it is a Sounder device.	Check the connections to the device.
Wiring changed SC at card n	Fault 	There is a short circuit on the loop n wiring.	Identify the device where a cable fault has occurred and remove the fault.
Interface input OC /SC	Fault 	There is an open or short circuit on the input line of an interface.	Locate and remove the wiring fault. Ensure the end-of-line device is connected in the circuit.
Device Mains failed	Fault 	There is a mains supply failure at an interface unit, repeat panel or mimic panel	Check the fuse and mains supply to the equipment.
Device Battery fault	Fault 	The battery supply at an interface unit, repeat panel or mimic panel has failed the load test.	Check the battery and replace if necessary.

Disablement conditions

A disablement condition is the manual or automatic disablement of a part of the fire detection system. An automatic disablement may be pre-configured for your premises to disable smoke sensors during the normal working hours in areas where smoke or dust may be present as a result of day to day working. A manual disablement may be necessary where temporary building work is being undertaken that could result in a false alarm.

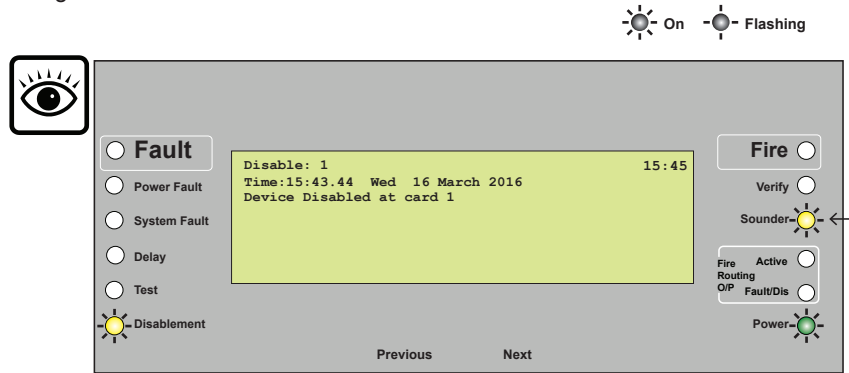












This indication is only given if a sector, sounder device or master alarms in the system are disabled.

What must be done?	Investigate the reason for the disablement and re-instate the devices if appropriate.
Record the event	Where necessary make an entry in the log book of the event for future reference.
Multiple Disablements	The number 'n' following the word 'Disable' located top left on the display denotes the number of disablements present in the system. Each disablement is logged in the Historic Events log which can be recalled using the menus, see How to view the Historic Events.

Typical Disablement Messages

The following table shows some typical disablement messages and indications that may appear at the panel.

 On  Flashing

Message	Indication	Meaning	Action
FARE Disabled	Fault  Fault/Dis 	The Fire Alarm Routing Equipment FARE has been Disabled.	If manually disabled then investigate and if necessary re-enable FARE.
Zone Disabled at card n	Disablement  Fault/Dis 	The zone specified has been manually or automatically disabled.	If manually disabled then investigate and if necessary re-enable the zone.
Device disabled at card n	Disablement  Sounder 	The device connected to the loop circuit has been manually or automatically disabled. Additional indication is given if it is a sounder device.	If manually disabled then investigate and if appropriate re-enable the device.
Sector disabled at card n	Disablement  Sounder 	The fire alarm sector on loop n has been manually or automatically disabled.	If manually disabled then investigate and if appropriate, re-enable the sector.
Disabled Aux Relay n	Disablement 	The auxiliary relay n in the control panel has been manually or automatically disabled.	If manually disabled then investigate and if appropriate, re-enable the aux relay.
Master alarm(s) disabled	Disablement  Sounder 	The master alarms have been manually or automatically disabled.	If manually disabled then investigate and if appropriate, re-enable the master alarms.




Any changes to the setting of an automatic disablement must only be attempted by a trained engineer who is responsible for the fire alarm system, see contact details in the Log book.

Menu controls



Panel beeps on button press

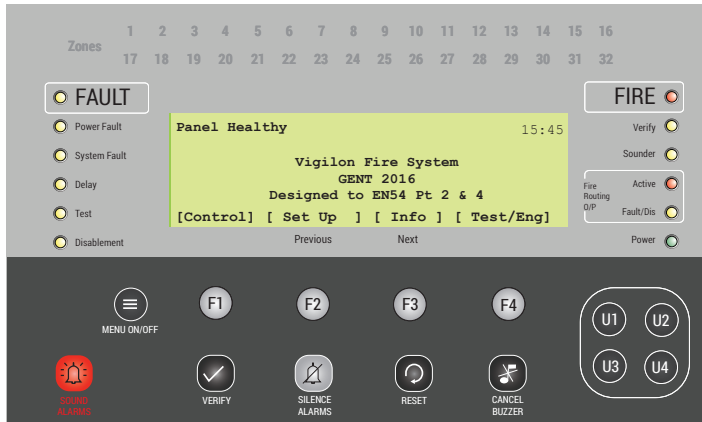

The **MENU ON/OFF** button activates the function buttons F1 to F4 for the selection of menu prompts that appear above the function keys on the display.

At any level in a menu, single press of the **MENU ON/OFF** button aborts an operation. However as an alternative the **[Quit]** option can be selected to exit the function mode.

If the time taken between button presses exceeds five minutes, then the control panel will automatically remove the menu options from the display and give a system status indications.

The **[Params]** option is a Help function to provide information to the user regarding the type of input data required.

Most of the functions in the **[Control]**, **[Setup]** and **[TestEng]** menu options are protected with password entry. The password is programmed during the commissioning of the system and is passed on to the site person responsible for the fire alarm system.



An open access to controls under User code is undesirable, so it is recommended that a customer password is setup.

Where a **password** code is not set up, there is an open entry to operate the controls under **[User Code]**. Where this is true the instructions for entering the access code, password (or PIN) in the following instructions should be ignored.

To carry out a display test

You can test the message display and the indicators on the control panel.

- a. Press the **MENU ON/OFF** button and then the F4 button to select **[Test/Eng]**.
- b. Press the F1 button to select **[Disp Test]**. Check that the following things happen: The display clears, the indicators illuminate, the buzzer sounds two distinct tones and then the display shows the system status message. The display test lasts for about 4 seconds.

How to change your PIN code

The following terms: Password, PIN, Usercode and Access code mean the same and are used interchangeably.

A Customer user PIN code (password) is normally set up by the servicing organisation during commissioning of the fire alarm system. The customer PIN code is set up for the end user. The person responsible for the fire alarm system should be aware of this PIN code. For security the PIN should be changed on a regular basis.

A previously created PIN can be changed:

- a. Press the **MENU ON/OFF** button.
- b. Press the F4 button to select **[Test/Eng]**.
- c. Press the F4 button to select **[UserCode]**. Use the keypad to input your existing access code and then press the **Enter** button.
- d. Press the F1 button to select **[NewPass]**. At the flashing cursor using the keypad input the PIN code and press the **Enter** button. Notice 'New access code set up' appears on the display.



Any changes made to the PIN code must be backed-up to the panel memory. If this is not done then the previous PIN is restored on resetting the panel, see section on 'How to save changes to memory'. It is not necessary to backup the password at a repeat panel.

How to view the historic events

There is a Historic log system events held at the panel. To view the Historic log.

- a. Press **MENU ON/OFF**.
- b. Press the F3 button to select **[Info]**. *Ignore step c. if an external printer is not fitted or is switched off.*
- c. To display the event(s): Press the F1 button to select **[Display]**. Notice 'Display' appears on the display. To print the event(s): Press the F2 button to select **[Print]**. Notice 'Print' appears on the display.
- d. Press the F2 button to select **[Historic]**. Notice 'Historic' followed by a flashing cursor appears on the display.
- e. Use the keypad to input an event number 1 to 255. If you want to view events at another node in a networked system, then you will need the node number. Select **[Node]** and enter the node number.



The event number '1' is always the most recent event.

- f. Press the F2 button to select **[Enter]**. Notice the required event(s) are displayed or printed depending on your selection.

Cards inside the control panel

The control panel uses the following card reference numbers.

- ▣ **Card 0** is always the **Main controller card (MCC) or Main Control Board (MCB)**, also referred to as a local controller.
- ▣ **Cards 1 to 4/6 #** are always loop cards from a range 1 to 6 associated with the Vigilon Plus panel, they monitor and control the devices on loop circuits within the protected premises.

Cards 1 to 2 are always loop cards from a range 1 to 2 associated with the Vigilon Compact Plus panel, they monitor and control the devices on loop circuits within the protected premises.

A 6 loop Vigilon Plus control panel VIG1-72 has a larger capacity and can have up to 6 loop cards fitted, the additional loops occupy positions **Card 5** and **Card 6**.



The loop cards are not applicable at a *Vigilon Plus Network Node*.

- ▣ **Card 14** is always the memory, also known as Non volatile Memory (NVM) that resides on the **Backplane**.

How to save changes to memory

If you make any changes to a Labels or Password then you must save these to the NVM (Non Volatile Memory) or Memory of the panel.



Changes made to labels and password can be saved to the panel memory (NVM), this can only be done when there are no disablements present on the system.

The following procedures assume a customer password (PIN) is setup at the panel.

- Press the **MENU ON/OFF** button.
- Press the F2 button to select **[Set Up]**.
- Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- Press the F4 button to select **<etc>** and then press the F3 button to select **[Save]**.



The 'Save' option is only available if Access level 2 PIN is set up.

- Press the F2 button to select **[Enter]**. Observe confirmation of data backed up.

How to view active events

An active event is an event that is still present and has not cleared. You can view all active Fire, Fault or Disablement events.

- Press **MENU ON/OFF**.
- Press the F3 button to select **[Info]**. *Ignore step c. if an external printer is not fitted or is switched off.*
- To display the event(s): Press the F1 button to select **[Display]**. Notice 'Display' appears on the display. To print the event(s): Press the F2 button to select **[Print]**. Notice 'Print' appears on the display.
- Press the F1 button to select **[Active]**. Notice 'Active' appears on the display. To view events on the local panel and on a card by card basis then press the F3 button to select **[Card]**, notice 'on card' appears on the display. Enter the card number. To view events at another node in a networked system, then you will need to know the node number. Press the F4 button to select **[Node]** and enter a node number from a range 1 to 255.
- Press the F2 button to select **[Enter]**. Notice all of the active Fire, Fault and Disablement events are displayed in turn. Press the F2 **[Previous]** and F3 **[Next]** button to scroll through the displayed events.
- Press the F4 button to select **[Quit]**, when viewing of events is complete.

How to set the system clock



An incorrect setting of the system clock will affect any time related sensor configuration and consequently results in incorrect event time information.

- a. Press the **MENU ON/OFF** button and then the F2 button to select **[Set Up]**.
- b. Press the F4 button to select **[User Code]**. At the flashing cursor using the keypad input the PIN code and press the **Enter** button.
- c. Press the F1 button to select **[Set Clock]**. The system clock is displayed on the screen. Check the hour digits are flashing.
- d. Press the F2 or F3 button to **[Retard]** or **[Advance]** to the desired setting.
- e. Press the F1 button to select **[Next]**. Check that the Minute digits are now flashing.
- f. Press the F2 or F3 button to **[Retard]** or **[Advance]** to the desired setting.
- g. Press the F1 button to select **[Next]**. Check that the Date digits are now flashing.
- h. Press the F2 or F3 button to **[Retard]** or **[Advance]** to the desired setting.
- i. Press the F1 button to select **[Next]**. Check that the Month digits are now flashing.

- j. Press the F2 or F3 button to **[Retard]** or **[Advance]** to the desired setting.
- k. Press the F1 button to select **[Next]**. Check that the Year is now flashing.
- l. Press the F2 or F3 button to **[Retard]** or **[Advance]** to the desired setting.
- m. Press the F4 button to select **[Enter]**. Check that the display now shows the new time and date.



Any changes made to the time and date will be automatically sent to the repeat panels in the system. The system clock adjusts automatically for Day light saving, if set up during commissioning. Now 'Save' the changes made to the clock settings.

How to use the integral printer

Assuming the panel has an integral printer:

To Switch On / Off the Printer

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F3 button to select **[Printer]**. Check that 'Printer' appears on the screen.
- d. Press the F3 button to select **[On]** / **[Off]** and then press the F2 button to select **[Enter]**. 'Printer is on/off' is displayed.

To action a Paper Feed

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F3 button to select **[Printer]**. Check that 'Printer' appears on the screen.
- d. Press the F2 button to select **[Paper Fd]**. Note the display and menu prompts are cleared. Printer performs 8 line feeds.

To conduct a Printer Test

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F3 button to select **[Printer]**. Check that 'Printer' appears on the screen.
- d. Press the F1 button to select **[Test]**. Note the display and menu prompts are cleared.
- e. Check that the printer provides a listing of all the characters it is capable of printing.

How to enable/disable Sensing



These operations are not applicable for a *Vigilon Plus Network Node*.



It is only possible to disable a Manual Call Point (MCP) individually, not as part of a range. DISABLING A MCP IS NOT RECOMMENDED.

A sensing device such as a sensor or MCP in the system can be disabled/enabled. You will need the device and loop numbers, this information can be found in the site specific documents held by the person responsible for the fire system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using and the keypad input your PIN code and then press the **Enter** button.
- d. To disable a device: Press the F2 button to select **[Disable]**. To enable a device: Press the F1 button to select **[Enable]**. The display shows either 'Enable' or 'Disable'.
- e. Press the F1 button to select **[Sensing]**. Notice 'Device' followed by a flashing cursor appears on the display. Use the keypad to input a device number from a range 1 to 200).
- f. Press the F2 button to select **[Loop]**. Notice 'Loop' followed by a flashing cursor on the display. Use the keypad to input a loop number from a range 1 to 6.
- g. Press the F2 button to select **[Enter]**. This is confirmed by: 'Device(s) enabled' or 'Device(s) disabled'. The Disablement light is lit upon disablement of the device.

How to enable/disable a zone

NA *These operations are not applicable for a Vigilon Plus Network Node.*

A zone is a subdivision of your premises that is protected by the fire alarm system. There can be up to 128 zones configured in a system. Any zone operation can be disabled or enabled. You will need to know the zone number, this can be found in the site specific documentation held by the person responsible for the fire alarm system.

From the panel menu:

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. To disable a zone: Press the F2 button to select **[Disable]** or press the F1 button to select **[Enable]**.
- e. Press the F4 button to select **<etc>** and then press the F2 button to select **[Zone]**. At the flashing cursor using the keypad input a zone number from a range 1 to 128.
- f. Press the F2 button to select **[Enter]**. Notice the action has been processed and a message appears on the display 'Zone n enabled' or 'Zone n disabled'. The Disablement light will be illuminated upon disablement of any zone.

How to manually switch On / Off FARE

The fire alarm routing equipment (FARE) output is controlled via a Loop Interface to signal the Alarm Receiving Centre (ARC) of a fire event that has been detected in the system.

A manual selection of 'FARE On' will switch the FARE output On to initiate fire fighting action via ARC. A FARE Off will switch off the FARE.

This is a short method in the control menu where the user does not need to know the FARE interface parameter to input, like the node address, loop number and device number.

From the panel menu:

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. Momentarily press the F4 button to select **<etc>** until **[FARE]** option is displayed.
- e. Press the F4 button to select **[FARE]**.
- f. To switch On or Off signal to Fire Alarm Routing Equipment: Press the F1 or F2 button to select **[Off]** or **[On]**.
- g. Press the F2 button to select **[Enter]**. Notice the action has been processed and a message appears on the display 'FARE activated' or 'FARE deactivated'.

How to manually Disable / Enable FARE

The FARE interface can be manually Enabled or Disabled to stop signal to Fire Alarm Routing Equipment and to prevent signalling to Alarm Receiving Centre (ARC).

On selection of FARE disablement / enablement option it will prevent / allow normal automatic operation of FARE output.



Do not use Sector disablement to disable FARE Interface outputs.

From the panel menu:

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. To disable or enable FARE: Press the F2 button to select **[Disable] FARE** or press the F1 button to select **[Enable] FARE**.
- e. Momentarily press the F4 button to select **<etc>** until **[FARE]** option is displayed.
- f. Press the F1 button to select **[FARE]**.
- g. Press the F2 button to select **[Enter]**, the display shows either 'FARE Disabled' or 'FARE Enabled' message.

How to manually Disable / Enable FPE

All the FPE interfaces in a system that signal to all fire protection equipment (FPE) can be manually disabled or enabled.

On selection of FPE disablement / enablement option it will either prevent / allow normal automatic operation of FPE output.

From the panel menu:

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. To disable or enable FARE: Press the F2 button to select **[Disable] FPE** or press the F1 button to select **[Enable] FPE**.
- e. Momentarily press the F4 button to select **<etc>** until **[FPE]** option is displayed.
- f. Press the F2 button to select **[FPE]**.
- g. Press the F2 button to select **[Enter]**, the display shows either 'FPE Disabled at Card 1' or 'FPE Enabled at Card 1' message is displayed.

How to enable/disable an IO line

(NA) These operations are not applicable for a *Vigilon Plus Network Node*.

An interface input/output line can be disabled or enabled. You will need to know the IO line, device and loop numbers, these numbers can be found in the site specific documents held by the person responsible for the fire system.



An output line of an interface unit may be assigned to a sector and can only be disabled by disabling that sector. This has the effect of also disabling all other devices in the sector.

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. To disable an IO line press the F2 button to select **[Disable]** or press the F1 button to select **[Enable]**, the display reads 'Enable' or 'Disable'.
- e. Press the F2 button to select **[IO Line]**. At the flashing cursor using the keypad input an IO line number.
- f. Press the F2 button to select **[Device]**. At the flashing cursor using the keypad input a device number from a range 1 to 200.
- g. Press the F2 button to select **[Loop]**. At the flashing cursor using the keypad input a loop number from a range 1 to 6.
- h. Press the F2 button to select **[Enter]**. Notice the action has been processed and a message appears on the display: 'IO line disabled/enabled at Card n'. The disablement light will illuminate upon disablement of an IO line.

How to enable/disable auxiliary relay

The control panel / network node has two auxiliary relays that provides voltage free contacts to control external equipment in the event of a fire or fault condition. The operation of the relays can be disabled or enabled.

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Control]**.
- c. Press the F4 button to select **[UserCode]**. At the flashing cursor using the keypad input your PIN code and then press the **Enter** button.
- d. To disable the auxiliary relay press the F2 button to select **[Disable]** or press the F1 button to select **[Enable]**. This puts 'Disable' or 'Enable' on the display.
- e. Press the F4 button three times selecting **<etc>** on each occasion and then press the F2 button to select **[Aux Rly]**. At the flashing cursor using the keypad input an auxiliary relay number from a range 1 to 2.
- f. Press the F2 button to select **[Enter]**. Notice the action has been processed and a message appears on the display: 'Aux Rly n disabled/enabled'. The Disablement light will illuminate upon disablement of an auxiliary relay.

Other enable/disable options

There are other options such as Sounders, Command Build, Group, and Communication that are accessible for enablement and disablement, for further advice contact your servicing organisation, see the Log book for contact details.

How to view a device label

NA This operation is not applicable for a *Vigilon Plus Network Node*.

Each device in the system is given a location label at the time the system is commissioned to identify its installation position. To view a device label you will need to know the device address and the loop on which it resides, which can be found in the site specific documentation held by the person responsible for the fire alarm system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F3 button to select **[Info]**. ***Ignore step c. if an external printer is not fitted or is switched off.***
- c. To display a device label press the F1 button to select **[Display]** or to print a device label press the F2 button to select **[Print]**. Notice 'Display' or 'Print' appears on the screen.
- d. Press the F4 button to select **<etc>**.
- e. Press the F2 button to select **[Label]**. Notice 'Label' appears on the display.
- f. Press the F3 button to select **[Device]**. Notice 'Device' followed by a flashing cursor appears on the display. Use the keypad to input a Device number from a range from 1 to 200.
- g. Press the F2 button to select **[Loop]**. Notice 'Loop' followed by a flashing cursor appears on the display. Use the keypad to input a loop number from a range 1 to 6.
- h. Press the F2 button to select **[Enter]**. Notice the selected label information is either displayed or printed.

How to view a zone label

NA This operation is not applicable for a *Vigilon Plus Network Node*.

A zone is a subdivision of a building used for fire detection. To view a zone label you will need to know the zone number. You can find this information in the site specific documentation, held by the person responsible for the fire alarm system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F3 button to select **[Info]**. *Ignore step c. if an external printer is not fitted or is switched off.*
- c. To display a zone label press the F1 button to select **[Display]** or to print a zone label press the F2 button to select **[Print]**. Notice 'Display' or 'Print' appears on the screen.
- d. Press the F4 button to select **<etc>**.
- e. Press the F2 button to select **[Label]**. Notice 'Label' appears on the display.
- f. Press the F4 button once to select **<etc>**.
- g. Press the F1 button to select **[Zone]**. Notice 'Zone' followed by a flashing cursor appears on the display. Use the keypad to input a Zone number from a range 1 to 128.
- h. Press the F2 button to select **[Enter]**. Notice the selected label information is either displayed or printed.

How to view a I/O line label

NA This operation is not applicable for a *Vigilon Plus Network Node*.

An interface unit can have up to four input/output (IO) lines. Each line may have been given a label for display during an event. To view an IO line label you will need to know the interface device address, the IO line number and the loop number, which can found in the site specific documentation held by the person responsible for the fire alarm system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F3 button to select **[Info]**. *Ignore step c. if an external printer is not fitted or is switched off.*
- c. To display an I/O line label press the F1 button to select **[Display]** or to print an I/O line label press the F2 button to select **[Print]**. Notice 'Display' or 'Print' appears on the screen.
- d. Press the F4 button to select **<etc>**.
- e. Press the F2 button to select **[Label]**. Notice 'Label' appears on display.
- f. Press the F2 button to select **[IO Line]**. Notice 'IO Line' followed by a flashing cursor appears on the display. Use the keypad to enter an input/output line number from a range 1 to 4.
- g. Press the F2 button to select **[Device]**. Notice 'Device' followed by a flashing cursor on the display. Use the keypad to enter a Device number from a range 1 to 200.
- h. Press the F2 button to select **[Loop]**. Notice 'Loop' followed by a flashing cursor appears on the display. Use the keypad to input a loop number from a range 1 to 6.
- i. Press the F2 button to select **[Enter]**. Notice the selected label information is either displayed or printed.

How to view the local panel label

When there is a network of control panels and nodes connected together in a system then each panel/node is usually given an identification label, also referred to as the Local panel label.

- a. Press the **MENU ON/OFF** button.
- b. Press the F3 button to select **[Info]**. *Ignore step c. if an integral printer is not fitted or is switched off.*
- c. To display a local panel label press the F1 button to select **[Display]** or to print a local panel label press the F2 button to select **[Print]**. Notice 'Display' or 'Print' appears on the screen.
- d. Press the F4 button to select **<etc>**.
- e. Press the F2 button to select **[Label]**. Notice 'Label' appears on the display.
- f. Press the F4 button once to select **<etc>**.
- g. Press the F2 button to select **[Local]**. Notice 'Local' appears on the display.
- h. Press the F2 button to select **[Enter]**. Notice the selected label information is either displayed or printed.

To view or print a map

NA The **[Loop map]** option is not applicable for *Vigilon Plus Network Node*.

A map provides information on devices that are connected to a loop off a control panel in a fire alarm network.

- a. Press the **MENU ON/OFF** button.
- b. Press the F3 button to select **[Info]**. *Ignore step c. if an integral printer is not fitted or is switched off.*
- c. To display a loop map press the F1 button to select **[Display]** or to print a loop map press the F2 button to select **[Print]**. Notice 'Display' or 'Print' appears on the screen.
- d. Press the F4 button to select **<etc>**.
- e. Press the F4 button to select **[UserCode]**. Notice a message on the display 'Enter access code', followed by a flashing cursor. Use the keypad to input your PIN and then press Enter button.
- f. Press the F3 button to select **[Loop Map]** or **[Map]**.
- g. On selecting **[Map]** you have a choice of either **[Loop Map]** or **[Net Map]**.
- h. On selecting **[Loop Map]** notice 'Loop Map' followed by a flashing cursor appear on the display.
- i. On selecting **[Net Map]** notice 'Node' followed by a flashing cursor appear on the display.
- j. Use the keypad to enter the loop number or node number and then press F3 to select **[Enter]**. Notice the map is either printed or displayed.

Editing labels



Any changes to labels must be backed up to the Memory, see the section 'How to save changes to the memory'.

How to edit a device label



This operation is not applicable for a *Vigilon Plus Network Node*.

There can be up to 200 devices connected to a loop, devices like fire sensors and manual call points. Each device can be given a label to identify its location in the system. Devices in your system may have already been given labels and these labels can be changed. To edit a device label you will need to know the device number and the loop on which it resides. You can find this information in the site specific documentation, held by the person responsible for the fire system.

- a. Press the **MENU ON/OFF** button
- b. Press the F2 button to select **[Set Up]**.
- c. Press the F4 button to select **[UserCode]**. A message is displayed: 'Enter access code' followed by a flashing cursor. Use the keypad to input your PIN and then press the Enter button.
- d. Press the F4 button once to select **<etc>**.
- e. Press the F1 button to select **[Modify]**. Notice 'Modify' appears on the display.
- f. Press the F1 button to select **[Label]**. Notice 'Label' appears on the display.
- g. Press the F3 button to select **[Device]**. Notice 'Device' followed by a flashing cursor appears on the display.
- h. Use the keypad to input a Device number.
- i. Press the F2 button to select **[Loop]**. Notice 'Loop' followed by a flashing cursor on the display. Use the keypad to input a loop number from a range 1 to 6.
- j. Press the F2 button to select **[Enter]**. Notice the previous label appears on the display with a flashing first character to prompt the modification, if there is no label the line is blank.
- k. Use the keypad to enter a label of up to 32 characters in length (28 for MCP) and then press the **Enter** button.

How to edit an Input/output line label

NA This operation is not applicable for a *Vigilon Plus Network Node*.

Each input / output (IO) line of an interface unit can be given a label and a previously entered label can be modified. To edit an IO line label you will need to know the IO line number, interface device number and the loop number it is connected to. You can find this information in the site specific documentation, held by the person responsible for the fire alarm system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F2 button to select **[Set Up]**.
- c. Press the F4 button to select **[UserCode]**. Notice a message on the display 'Enter access code', followed by a flashing cursor. Use the keypad to input your PIN and then press **Enter** button.
- d. Press the F4 button once to select **<etc>**.
- e. Press the F1 button to select **[Modify]**. Notice 'Modify' appears on the display.
- f. Press the F1 button to select **[Label]**. Notice 'Label' appears on the display.
- g. Press the F2 button to select **[IO Line]**. Notice 'IO Line' followed by a flashing cursor on the display. Using the keypad enter an input/output number from a range 1 to 4.
- h. Press the F3 button to select **[Device]**. Notice 'Device' followed by a flashing cursor appears on the display. Use the keypad to input a Device number from a range 1 to 200.
- i. Press the F2 button to select **[Loop]**. Notice 'Loop' followed by a flashing cursor on the display. Use the keypad to input a loop number from a range 1 - 6.
- j. Press the F2 button to select **[Enter]**. Notice the previous label appears on the display with a flashing first character to prompt you to edit a label. If there is no label then the line is blank.
- k. Using the keypad enter a label of up to 32 characters in length and then press the **Enter** button.

How to edit a zone label

NA This operation is not applicable for a *Vigilon Plus Network Node*.

Each zone can be given a label and an entered label can be modified. To edit a zone label you will need to know the zone number. You can find this information in the site specific documentation, held by the person responsible for the fire alarm system.

- a. Press the **MENU ON/OFF** button.
- b. Press the F2 button to select [**Set Up**].
- c. Press the F4 button to select [**UserCode**]. Notice a message on the display 'Enter access code', followed by a flashing cursor. Use the keypad to input your PIN and then press **Enter** button.
- d. Press the F4 button once to select **<etc>**.
- e. Press the F1 button to select [**Modify**]. Notice 'Modify' appears on the display.
- f. Press the F1 button to select [**Label**]. Notice 'Label' appears on the display.
- g. Press the F4 button once to select **<etc>**.
- h. Press the F1 button to select [**Zone**]. Notice 'Zone' followed by a flashing cursor appears on the display. Using the keypad enter a number from a range 1 to128.
- i. Press the F2 button to select [**Enter**]. Notice the previous label appears on the display with a flashing first character to prompt you to edit the label. If there is no label then the line is blank.
- j. Using the keypad to enter a label of up to 32 characters in length and then press the **Enter** button.

How to edit a local panel label

A label is normally given to the control panel to identify its location in a network. A previously entered label can be modified.

- a. Press the **MENU ON/OFF** button.
- b. Press the F2 button to select [**Set Up**].
- c. Press the F4 button to select [**UserCode**]. Notice a message on the display 'Enter access code', followed by a flashing cursor. Use the keypad to input the PIN and then press **Enter** button.
- d. Press the F4 button once to select **<etc>**.
- e. Press the F1 button to select [**Modify**]. Notice 'Modify' appears on the display.
- f. Press the F1 button to select [**Label**]. Notice 'Label' appears on the display.
- g. Press the F4 button once to select **<etc>**.
- h. Press the F2 button to select [**Local**]. Notice 'local' appears on the display.
- i. Press the F2 button to select [**Enter**]. Notice the previous label appears on the display with a flashing first character to prompt you to edit the label. If there is no label then the line is blank.
- j. Using the keypad to enter a label of up to 40 characters in length and then press the **Enter** button.

How to edit custom label

A custom message or label is displayed beneath the *Designed to EN54 Pt 2 & 4* line on the panel. The message or label can be up to 40 characters in length and it can be contact information of the person responsible for the fire alarm system or it can have contact phone number of the servicing organisation. Example: "For service call: phone number".

A previously entered label can be modified.

- a. Press the **MENU ON/OFF** button.
- b. Press the F2 button to select **[Set Up]**.
- c. Press the F4 button to select **[UserCode]**. Notice a message on the display 'Enter access code', followed by a flashing cursor. Use the keypad to input the PIN and then press **Enter** button.
- d. Press the F4 button once to select **<etc>**.
- e. Press the F1 button to select **[Modify]**. Notice 'Modify' appears on the display.
- f. Press the F1 button to select **[Label]**. Notice 'Label' appears on the display.
- g. Press the F4 button once to select **<etc>**.
- h. Press the F3 button to select **[Custom]**. Notice 'Custom' appears on the display.
- i. Press the F2 button to select **[Enter]**. Notice the previous label appears on the display with a flashing first character to prompt you to edit a label. If there is no label then the line is blank.
- j. Using the keypad enter a label of up to 40 characters in length and press the **Enter** button.

Maintenance

Replacing the glass on a Manual Call Point

- a. Disengage the front cover from the call point assembly using the end of the test key. Insert the key into the slots 'E' on the underside of the call point to compress the retaining tabs and the from the bottom edge lift out the cover.
- b. Carefully remove broken glass from the call point.




Take appropriate precautions when clearing the broken glass to prevent injury.

- c. Insert the key in the keyhole and turn the key such that the tab is at position 'F' and then insert a new glass as shown. Ensure the glass has engaged into the yellow arm.
- d. Hook the front cover onto the top edge of the call point assembly and then push the bottom edge down until a click is heard and the cover shuts onto the main assembly. Check both hooks on the top of the front cover are locked onto the call point assembly.
- e. Turn the test key anticlockwise one quarter of a turn such that the glass is held under the yellow arm. The call point is now ready for normal operation.
S4-34891 Spare MCP glass (Pack of 10)

Resetting the resetable element on a Manual Call Point

Slide the keyhole cover upwards to expose the keyhole. Insert the test key in the keyhole and turn it clockwise by one quarter of a turn. Then turn the test key anticlockwise by one quarter of a turn to reset the call point element.

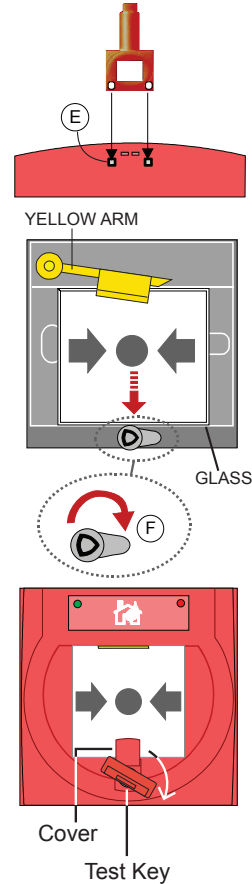

Battery replacement

It is recommended where batteries are installed they are replaced at 4 Yearly intervals from the date the system is first commissioned.



Any servicing work on the system must be carried out by a suitably trained person, such as an engineer from the servicing organisation.



Replacing printer paper

The printer paper roll is located on the inside of the inner door. A vertical line on the paper indicates the end of paper.

VS-PROLL Replacement paper roll

- a. Open the panel outer door using the key supplied and then open inner door using the allen key/flat ended screw driver dependent on panel construction.
- b. Remove the old paper roll from inside of the inner door assembly. Where the paper roll holder is vertically above the mechanism then do : d), e) and then c).
- c. Fit the new paper roll to the holder.
- d. Insert paper from the new paper roll into the printer mechanism.
- e. Turn the paper feed wheel located on the outside of the inner door downwards to feed paper thru the print mechanism and out.
- f. Close the inner door and lock it.
- g. Carry out a printer paper test, see panel controls section of this manual.
- h. Close the outer door and lock it.

Choose the paper roll feed appropriate for your panel

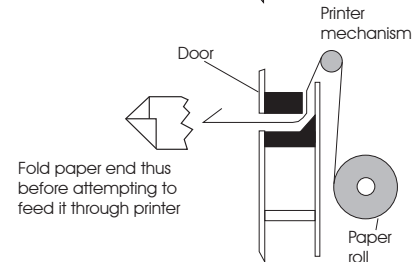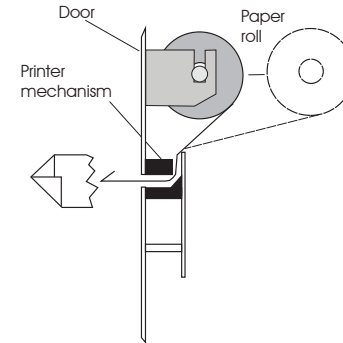

Repair function


NA This operation is not applicable for a *Vigilon Plus Network Node*.

Any wiring fault on the system must be rectified by an engineer from the servicing organisation, for contact details see the log book. A wiring fault will require correction to the wiring before running a **[Repair]** command at the main panel. The repair function is accessible using customer (level 2) password, however under normal circumstances it is unnecessary to use this function.

- a. Press the **MENU ON/OFF** button.
- b. Press the F1 button to select **[Test/Eng]**.
- c. Press the F4 button to select **[UserCode]**. Notice a flashing cursor and a message on the display 'Enter access code'. Use the keyboard to input your password and then press the **Enter** button.
- d. Press the F1 button to select **[Loop]** and F1 button to select **[Repair]** notice 'Loop' followed by a flashing cursor on the display. Use the keypad to input a loop number from a range 1 - 6 and then press the F2 button to select **[Enter]**.

SAFE System Switch Operation

The SAFE System switch allows management of alarms in an Area of a building. It is used to silence Alarms on occurrence of an Event 'first smoke detection' in an Area, thus giving time to clear the cause, such as smoke from burnt toast. It is also used to disable detection for a period of time and prevent false alarm from maintenance work in an Area.

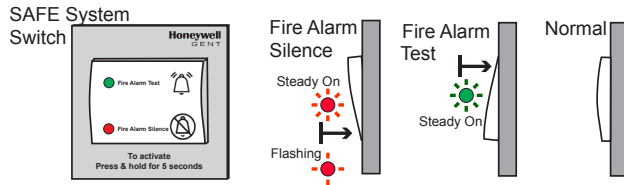

To Silence Area Alarms

Upon occurrence of an Event '1st smoke detection' in an Area and with the Area Alarms active:

- Press the **Fire Alarm Silence** button on SAFE System switch and keep it pressed until the red light 'LED' on the switch is lit Steady On and then release the button. The Area Alarms are silenced for a default 2 minutes duration plus an Extended time period also if configured.

At 30s prior to the end of the default 2 minutes plus an extended duration if applicable, the red light 'LED' on the switch will give a flashing indication and the Area alarms will give out a single Chirp sound and at the end of this time, so:

- if smoke had cleared then the panel resets automatically
- if smoke is still present then cause and effect alarms are activated.

To Disable Area Smoke detection


Under normal panel healthy status the Area Smoke detection can be disabled for upto 15 minutes at a time.

- Press the **Fire Alarm Silence** button on the SAFE System switch and keep it pressed. When the red LED on the switch is lit release the button. This will disable Area smoke detection for 15 minutes.
Over the Area smoke disablement duration pressing the Fire Alarm Silence button re-enables Area smoke detection.
- At 30s prior to automatic enablement of Area Smoke detection the red LED on the switch flashes and the area alarms output a chirp sound. Over the 30s duration the Area smoke can be disabled by further 15 minutes on pressing the **Fire Alarm Silence** button. Up to 60 minutes of Area smoke disablement is possible in this manner.

To Test Area alarms

During normal condition the Area Alarms can be tested using the SAFE System switch to check they are working:

- Press the **Fire Alarm Test** button on the switch and keep it pressed. When the associated green LED is lit the test alarms will sound in the Area.
- On completion of the test let go of the **Fire Alarm Test** button. The Area Alarms will continue for a short duration and then stop. The green LED will turn Off.

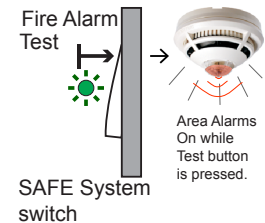


Warden Area Operation


If configured the Warden Area Alarms will sound with linked Areas Alarms.

UK CA 0832	CE 2831								
<p>Honeywell Gent Manufactured by: Honeywell Life Safety Systems-Romania Street: Str. Salcamlor 2 bis- Lugoj</p> <p style="text-align: center;">17</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">DoP</td> <td style="width: 50%;">Product No.</td> </tr> <tr> <td>131-CPR-2017</td> <td>COMPACT-PLUS</td> </tr> <tr> <td>131-CPR-2017</td> <td>COMPACT-PLUS-PO</td> </tr> <tr> <td>131-CPR-2017</td> <td>COMPACT-PLUS-SP</td> </tr> </table>		DoP	Product No.	131-CPR-2017	COMPACT-PLUS	131-CPR-2017	COMPACT-PLUS-PO	131-CPR-2017	COMPACT-PLUS-SP
DoP	Product No.								
131-CPR-2017	COMPACT-PLUS								
131-CPR-2017	COMPACT-PLUS-PO								
131-CPR-2017	COMPACT-PLUS-SP								
<p>EN54-2: 1997 + A1:2006, EN54-4: 1997 + A1: 2002 + A2: 2006</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">COMPACT-PLUS</td> <td style="width: 50%;">(EN54-2 & 4)</td> </tr> <tr> <td>COMPACT-PLUS-PO</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>COMPACT-PLUS-SP</td> <td>(EN54-2 & 4)</td> </tr> </table> <p style="text-align: center;">Intended for use in fire detection and fire alarm systems in and around buildings</p> <p style="text-align: center;">Refer to DOP 131-CPR-2017 for level or class of performance declared, for details see website www.gent.co.uk</p>		COMPACT-PLUS	(EN54-2 & 4)	COMPACT-PLUS-PO	(EN54-2 & 4)	COMPACT-PLUS-SP	(EN54-2 & 4)		
COMPACT-PLUS	(EN54-2 & 4)								
COMPACT-PLUS-PO	(EN54-2 & 4)								
COMPACT-PLUS-SP	(EN54-2 & 4)								

UK CA 0832	CE 2831																
<p>Honeywell Gent Manufactured by: Honeywell Life Safety Systems-Romania Street: Str. Salcamlor 2 bis- Lugoj</p> <p style="text-align: center;">16</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">DoP</td> <td style="width: 50%;">Product No.</td> </tr> <tr> <td>129-CPR-2016</td> <td>VIGPLUS-24</td> </tr> <tr> <td>129-CPR-2016</td> <td>VIGPLUS-24-NP</td> </tr> <tr> <td>129-CPR-2016</td> <td>VIGPLUS-24-PO</td> </tr> <tr> <td>129-CPR-2016</td> <td>VIGPLUS-24-SP</td> </tr> <tr> <td>130-CPR-2016</td> <td>VIGPLUS-72</td> </tr> <tr> <td>130-CPR-2016</td> <td>VIGPLUS-72-PO</td> </tr> <tr> <td>130-CPR-2016</td> <td>VIGPLUS-72-SP</td> </tr> </table>		DoP	Product No.	129-CPR-2016	VIGPLUS-24	129-CPR-2016	VIGPLUS-24-NP	129-CPR-2016	VIGPLUS-24-PO	129-CPR-2016	VIGPLUS-24-SP	130-CPR-2016	VIGPLUS-72	130-CPR-2016	VIGPLUS-72-PO	130-CPR-2016	VIGPLUS-72-SP
DoP	Product No.																
129-CPR-2016	VIGPLUS-24																
129-CPR-2016	VIGPLUS-24-NP																
129-CPR-2016	VIGPLUS-24-PO																
129-CPR-2016	VIGPLUS-24-SP																
130-CPR-2016	VIGPLUS-72																
130-CPR-2016	VIGPLUS-72-PO																
130-CPR-2016	VIGPLUS-72-SP																
<p>EN54-2: 1997 + A1:2006, EN54-4: 1997 + A1: 2002 + A2: 2006</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">VIGPLUS-24</td> <td style="width: 50%;">(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-24-NP</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-24-PO</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-24-SP</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-72</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-72-PO</td> <td>(EN54-2 & 4)</td> </tr> <tr> <td>VIGPLUS-72-SP</td> <td>(EN54-2 & 4)</td> </tr> </table> <p style="text-align: center;">Intended for use in fire detection and fire alarm systems in and around buildings</p> <p style="text-align: center;">Refer to DOP -129-CPR-2016 & DOP-130-CPR-2016 for level or class of performance declared, for details see website www.gent.co.uk</p>		VIGPLUS-24	(EN54-2 & 4)	VIGPLUS-24-NP	(EN54-2 & 4)	VIGPLUS-24-PO	(EN54-2 & 4)	VIGPLUS-24-SP	(EN54-2 & 4)	VIGPLUS-72	(EN54-2 & 4)	VIGPLUS-72-PO	(EN54-2 & 4)	VIGPLUS-72-SP	(EN54-2 & 4)		
VIGPLUS-24	(EN54-2 & 4)																
VIGPLUS-24-NP	(EN54-2 & 4)																
VIGPLUS-24-PO	(EN54-2 & 4)																
VIGPLUS-24-SP	(EN54-2 & 4)																
VIGPLUS-72	(EN54-2 & 4)																
VIGPLUS-72-PO	(EN54-2 & 4)																
VIGPLUS-72-SP	(EN54-2 & 4)																



WEEE Directive:
 At the end of their useful life, the packaging, product and batteries should be disposed of via a suitable recycling center.
 Do not dispose of with your normal household waste. Do not burn.



At the end of their useful life, the packaging, product and batteries should be disposed of via a suitable recycling centre and in accordance with national or local legislation.

Honeywell Gent reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions of changes.



Honeywell Building Technologies, Building 5 Carlton Park, King Edward Avenue,
Narborough, Leicester, LE19 0AL

Website: www.gent.co.uk

Telephone: +44 (0) 203 409 1779

Technical support: www.gentexpert.co.uk